PSEVLOOMPED-EVITO

Installation instructions Mercedes eVito W447 Model 2020 -

PSEVLOOMPED-EVITO

If used as a speed limiter for vehicles with original cruise control - see page 2 -

Before installation.

To make the installation easier, the complete installation instructions should be read through, before the installation is started.

This instructions, contains information on how to install the system which is to be followed by a professional installation engineer.

Modern cars are equipped with electronic, which can be costly to replace if damaged by inappropriate treatment.

Parksafe can not be held responsible, for any error caused by installation errors.

Check that all the parts are included in the kit.

- **1 pcs. Unit.**
- **1 pcs. 14-p connector.**
- **1 pcs. 2-p connector for CAN.**
- **1 pcs. Installation guide.**

Some good advice.

- **Always disconnect the negative cable from the battery, before installation.**
- **Always use the enclosed installation instructions for installing.**
- **The rev. number on the unit and the installation guide must be the same.**
- **Be aware that eg. radio code might has to be typed in.**
- **Find a location to install the unit securley.**
- **If any wire(s) are left over, cut them off and insulate.**
- **Only use multimeter to measure.**
- **Always test the system before re-assembling the car.**
- **Fly lead(s) must be soldered.**
- **All wire connections are viewed from wire side.**

Connector above OBD connector
(Wire is twisted)

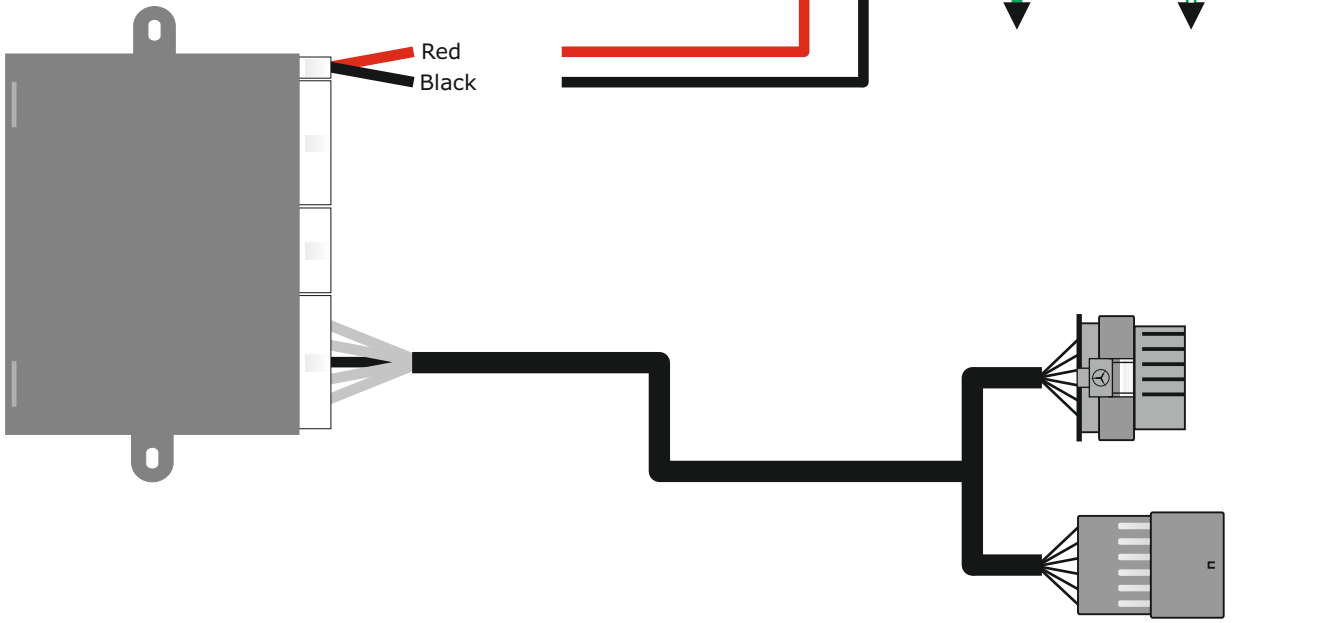

Connector on the accelerator pedal

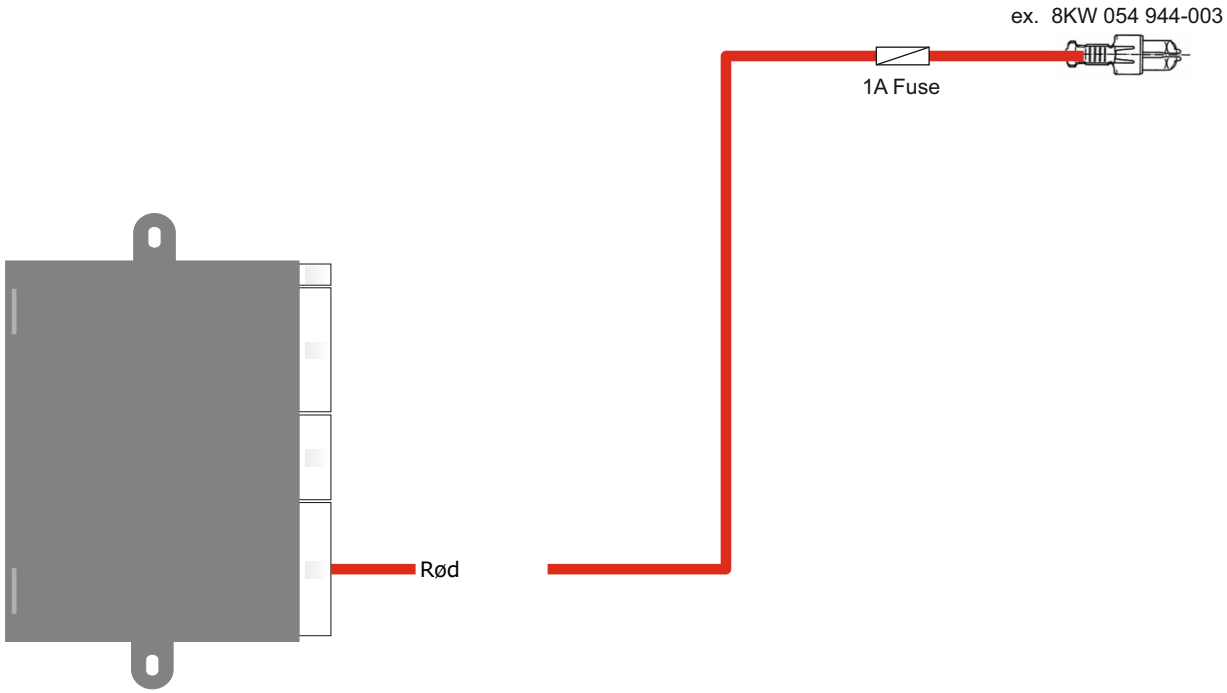

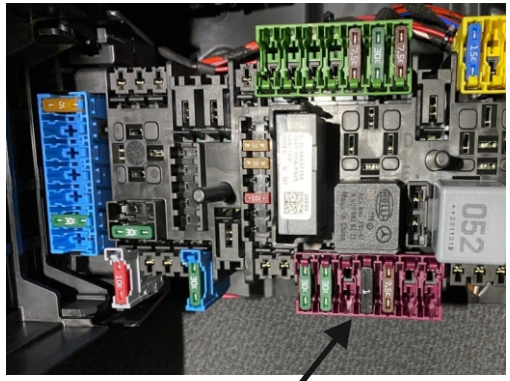

**Ignition (kl 15) in fusebox below glove compartment. Use a cable lug (ex. Hella 8KW 054 944-003),
or connect behind.**